
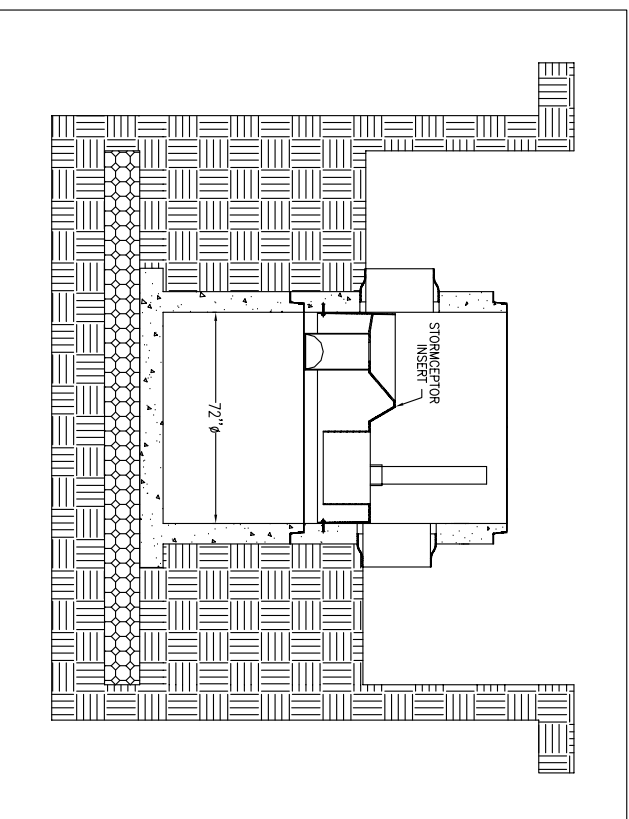


CONCRETE PIPE DIVISION

Precast Concrete Stormceptor
STC 900 thru STC 1800
Installation Guide

DR. BY: E. CARRASCO
CK. BY:
DATE: AUG. 31, 2006
SCALE: N.T.S.
DWG.# 1 of 3

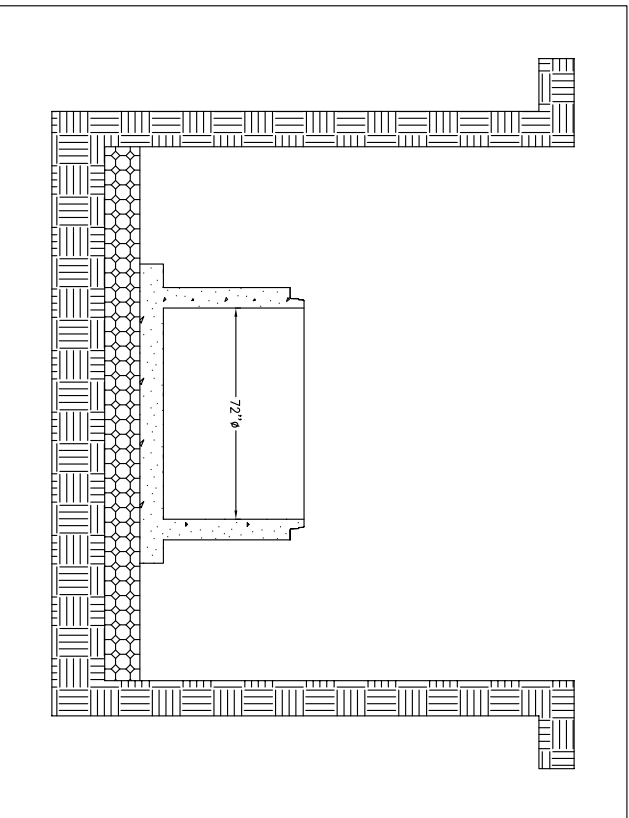


1. FOLLOW ALL LOCAL, STATE AND FEDERAL SAFETY REGULATIONS AT ALL TIMES DURING THE EXCAVATION AND ERECTION OF THE STORMCEPTOR.
2. ALL PIECES ARE GASKETED. FOR GASKET ASSEMBLY, SEE "PROFILE GASKET ASSEMBLY GUIDELINES (SHT. 3 OF 3)" DETAIL.
3. EXCAVATE HOLE TO THE PROPER DEPTH AS SHOWN ON THE ENGINEERING DRAWINGS ALLOWING FOR 3" TO 6" OF SUB-BASE.
4. MEASURE OUTSIDE DEPTH OF BASE, CONTAINMENT CHAMBER, AND RISER WITH INSERT TO PROPOSED INVERT OF STORM LINE, TO VERIFY REQUIRED DEPTH OF EXCAVATION.
5. PLACE GRANULAR SUB-BASE AND COMPACT TO LOCAL/STATE STANDARDS AS PER THE ENGINEERS REQUIREMENTS.
6. SET BASE SECTION AND LEVEL (CHECK ELEVATION).

7. INSTALL REMAINING CONTAINMENT CHAMBER RISERS IF NECESSARY
8. INSTALL RISER SECTION OF STORMCEPTOR WITH FACTORY INSTALLED INSERT (CHECK ELEVATION AND VERIFY THAT UNIT IS LEVEL).
9. INSTALL STORMCEPTOR INTERNAL PIPING (SEE DOWN PIPE INSTRUCTIONS, SHT. 3 OF 3).
10. PLUG AND GROUT LIFTING HOLES IF PRESENT.
11. BACKFILL UNIT TO THE INLET AND OUTLET PIPES USING COMPACTED GRANULAR FILL OR MATERIAL APPROVED BY THE ENGINEER. COMPACTION DENSITY AND LIFT HEIGHT SHOULD CONFORM TO LOCAL/STATE GUIDELINES.


CONCRETE PIPE DIVISION

Precast Concrete Stormceptor
STC 900 thru STC 1800
Installation Guide

DR. BY: E. CARRASCO
CK. BY:
DATE: AUG. 31, 2006
SCALE: N.T.S.
DWG.# 2 of 3

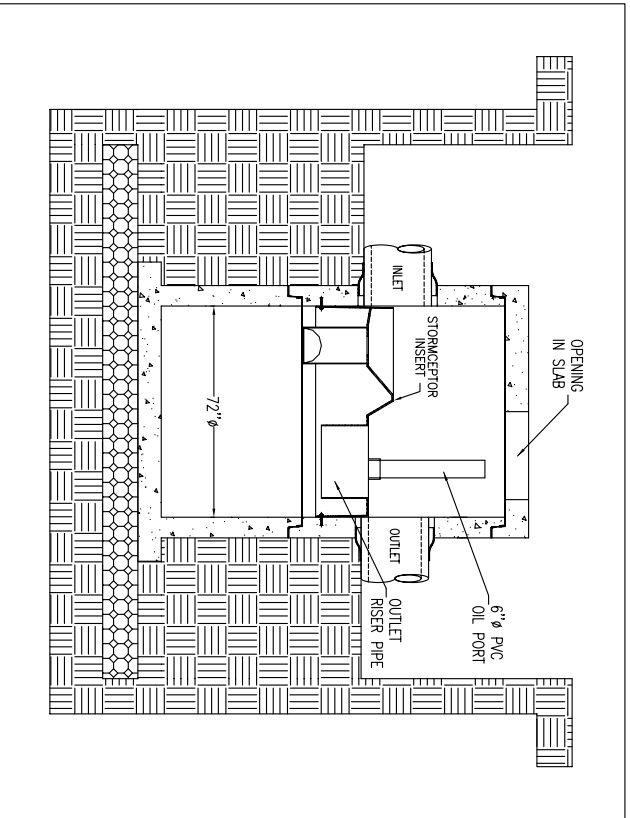

12. INSTALL INLET AND OUTLET STORM DRAIN PIPE.
13. IF FLEXIBLE CONNECTORS ARE USED, TIGHTEN THE CONNECTOR OVER THE PIPE TO THE MANUFACTURER'S RECOMMENDED TORQUE.
14. INSTALL ADDITIONAL RISER SECTION(S) IF NECESSARY.
15. INSTALL TOP SLAB SUCH THAT THE OPENING IN THE SLAB ALLOWS ACCESS TO BOTH THE OIL PORT AND OUTLET RISER PIPE.

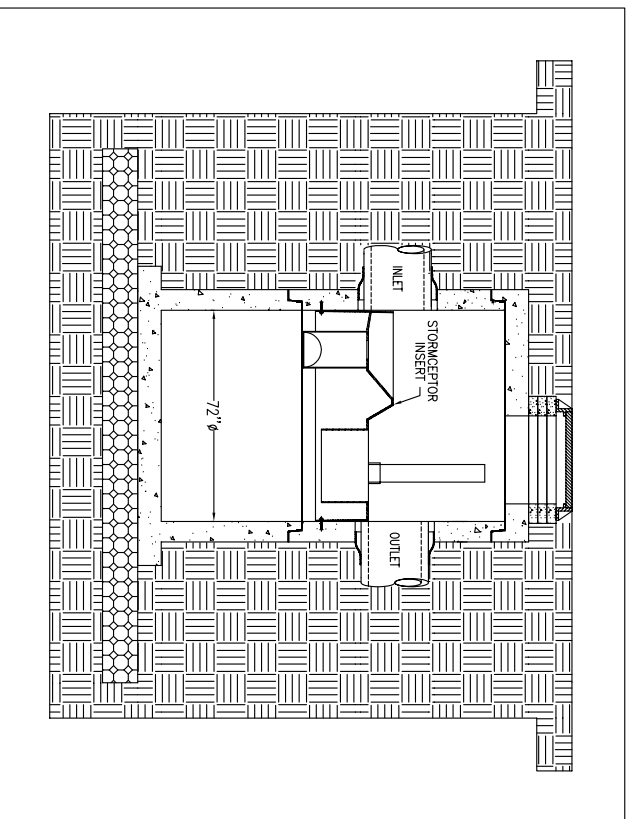


16. INSTALL AND SET GRADE ADJUSTMENT RINGS IN A FULL BED OF MORTAR (AS REQUIRED).
17. INSTALL FRAME AND COVER AT THE FINISHED GRADE ELEVATION IN A FULL BED OF MORTAR.
18. BACKFILL UNIT UP TO FINISHED GRADE USING COMPACTED GRANULAR FILL OR MATERIAL APPROVED BY THE ENGINEER. COMPACTION DENSITY AND LIFT HEIGHT SHOULD CONFORM TO LOCAL/STATE GUIDELINES.

CONCRETE PIPE DIVISION



Precast Concrete Stormceptor
STC 900 thru STC 1800
Installation Guide

DR. BY: E. CARRASCO
CK. BY:
DATE: AUG. 31, 2006
SCALE: N.T.S.
DWG.# 3 of 3

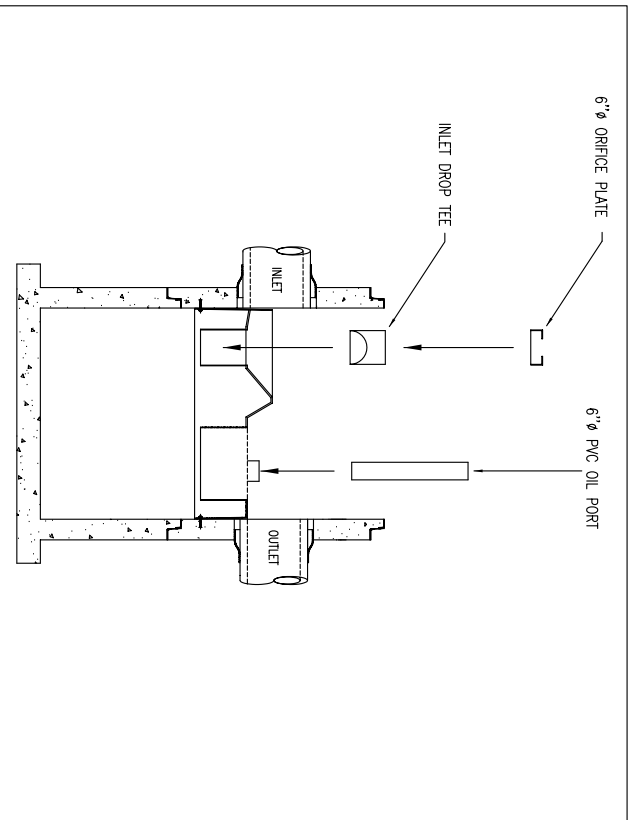

DOWN PIPE & VENT PIPE INSTALLATION INSTRUCTIONS

1. INSTALL INLET DROP TEE FROM THE TOP OF THE DISC INSERT.
2. INSTALL 6" Ø ORIFICE PLATE IN INLET PIPE (GLUE IN PLACE WITH CHEMREX 948).
3. ORIFICE PLATE SITS 1" BELOW INSERT.
4. ATTACH THE PROVIDED 6" Ø OIL PORT (IF NOT PRE-INSTALLED AT PRODUCTION PLANT) TO THE FRP COUPLING ON THE FIBERGLASS INSERT WITH CHEMREX 948. CUT OIL PORT AS REQUIRED TO ALLOW ACCESS FOR INSPECTION, BUT ENSURE THAT THE OIL PORT EXTENDS 12" ABOVE THE DESIGN HIGH WATER LEVEL IN THE STORMCEPTOR.

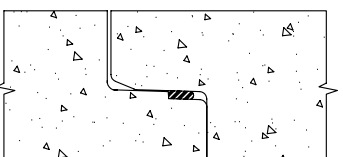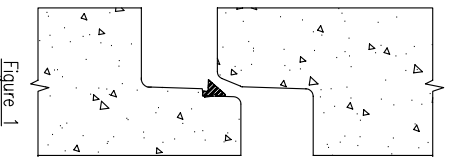

PROFILE GASKET ASSEMBLY GUIDELINES

1. The precast Stormceptor section should be handled with care to avoid any damage to the bell or spigot end.
2. Clean all dirt and debris from the spigot and bell surfaces.
3. Place the profile gasket on the step of the cleaned spigot. The fin of the gasket should point towards the shoulder of the spigot. (See Figure 1)
4. After the gasket is seated on the spigot, the gasket will need to be equalized. Insert a smooth round rod between the gasket and the spigot. Run the rod around the entire circumference of the joint several times to equalize the gasket. Take care not to cut or damage the gasket.
5. Apply joint lubricant to the inner surface of the bell including the leading edge. Lubricate the spigot and gasket.
6. Align the Stormceptor units and gently push the joint home. (See Figure 2)

IF JOINTING PROBLEMS ARISE CONTACT THE STORMCEPTOR REPRESENTATIVE IMMEDIATELY. DO NOT TRY AND FORCE THE JOINT HOME. AS THIS MAY CAUSE DAMAGE TO THE JOINT.